



# DAA STAGE-RUNNER CART



Double-Alpha Academy B.V.  
Elzenweg 33b, 5144MB Waalwijk,  
Netherlands


Tel: +31 416 660 464  
Email: [daa@doublealpha.biz](mailto:daa@doublealpha.biz)  
[www.doublealpha.biz](http://www.doublealpha.biz)

## Assembly Instructions

Your cart arrives mostly assembled. Follow these quick steps to make it ready for range use:


### 1. Install Wheel Axle

Slide the axle rod through the lower bracket of the frame, centered evenly left and right.

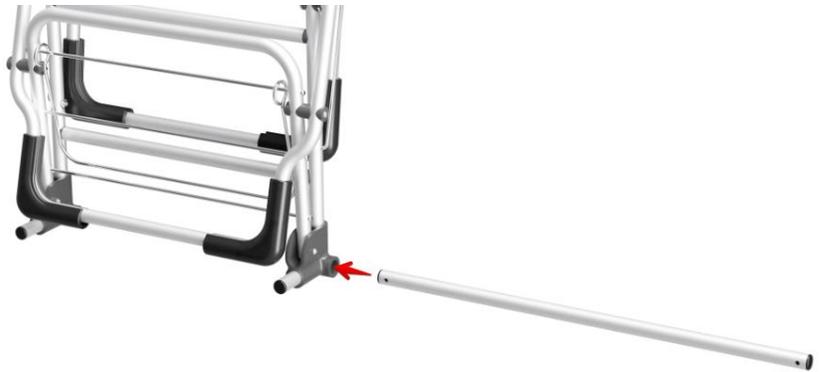

### 2. Attach Mud Guards

Clip the two mud guards onto the aluminum frame. Ensure both clamp tabs click firmly into place.

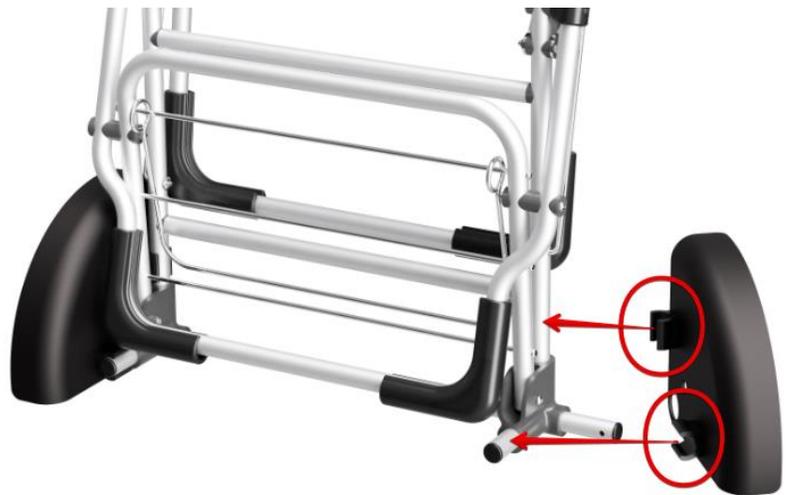

### 3. Mount Wheels

Slide the wheels onto the axle, add the large washer, then secure each wheel with the retention pin.



#### 4. Open Platform & Chair

Unfold the luggage platform and chair so the cart stands upright.



#### 5. Install Handle Frame

Fit the handle frame with fabric onto the upright frame. Keep the fabric's flat side facing the chair. Press down firmly until fully seated.




### 6. Insert Retainer Pins

Use the two short-cord pins to secure the handle frame.

Use the two long-cord pins to lock the luggage platform in place.

With all 4 pins in place, the luggage platform is fixed, yet the chair can still fold up when rolling the cart.

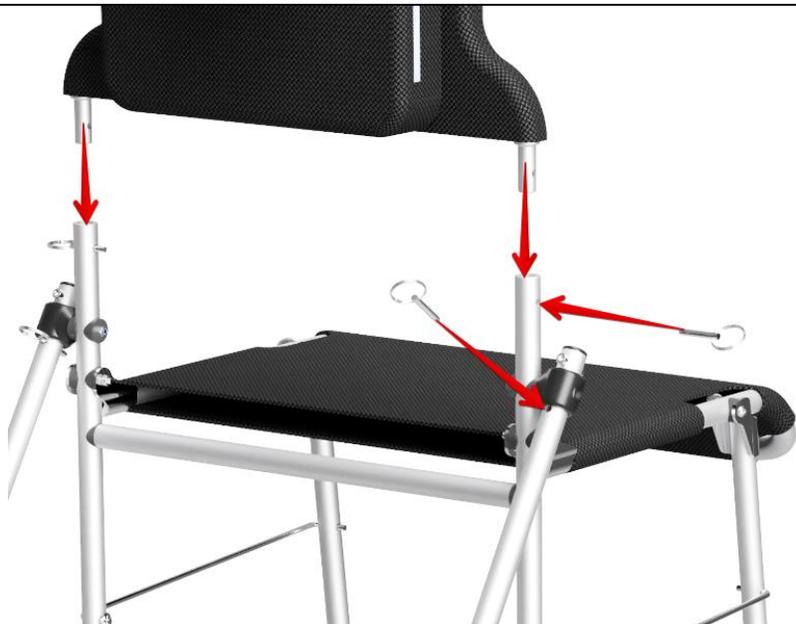

### 7. Ready to Use

Place your range bag on the luggage platform. Extend the platform bar if needed.

When moving, fold the chair up, and secure it with the elastic strap and hook.

### Mounting the Optional PCC Rifle Bag

The cart can hold two rifle bags, one per side. The PCC bag includes its bracket and support pole.

#### 1. Install Bracket

Remove the handle frame, slide the bracket below the handle joint and tighten screws. (red arrow)

Reinstall the handle frame.

#### 2. Attach Support Pole

Lock the pole upright and slide the bag's channel over it.

#### 3. Secure the Bag

Fasten the bottom Velcro tabs to the lower cart frame. (green arrows)

The PCC Rifle bag does not hamper rolling the cart or sitting, and keeps the rifle muzzle pointing up.

#### Warning:

If the luggage platform is empty, the cart may tip with a rifle on one side. Always remove the rifle bag before removing your range bag.

