



Thank you for choosing SHOTMAXX!

Please review this Quick Start Guide before using your shot timer for the first time.  
For additional information, translated manuals and video tutorials, visit [www.shotmaxx.com](http://www.shotmaxx.com).

## Unlocking Your SHOTMAXX

Your timer has been shipped in the locked mode, which conserves power and prevents accidental activation while in transit (lower display shows "LocHd"). To unlock the timer, press and hold down the MODE and START buttons for three seconds.  
To enter the locked mode, first enter the Countdown mode and then press the MODE and START buttons for three seconds.

## Charging Before First Use

Before first using your SHOTMAXX timer, be sure to plug it into a USB port or a USB power supply for at least 3 hours, to ensure the Lithium polymer battery is fully charged.

## Basic Menu Navigation

The SHOTMAXX timer has three modes:

- Watch
- Timer
- Stopwatch/Countdown

Press the MODE button to navigate between the three modes. Note that each mode illuminates an icon indicating which mode is active.



## Attention!

In Timer mode, with the timer running, the MODE and SET buttons are deactivated until you press the REV button. This is to prevent accidentally exiting the Timer mode while the timer is recording.

## Watch Mode

Press the START button to toggle between the AM/PM or 24 hour mode.

Press the REV button to toggle between seconds and date.

## Set Time

In Watch mode, press the SET button once. The Watch icon flashes.

Press the UP/DOWN button to set the hour.

Pressing the SET button once more toggles to minutes and then to seconds. Pressing and holding down either the UP or DOWN button results in fast forward or backward in setting the time.

Once the time is set, press the MODE button once to exit the Watch setting mode, then once more to return to Watch mode.

## Set Date

In Watch mode, press the SET button twice to reach the date settings. Press the UP/DOWN button to set the month. Use the SET button to navigate between the Month, Day and Year.

Press the MODE button to exit.

## Set Alarm

In Watch mode, press the SET button three times. Change the ON/OFF value by pressing the UP/ DOWN button.

Press the SET button once more to set the alarm time. Use the UP/DOWN button to set the hour and minutes.

Once the alarm is set to ON, an Alarm icon is displayed on the screen.

Press MODE to exit.

## View Battery Level

In Watch mode, press the SET button five times. The battery level is displayed in percentage.

## Timer Mode

Press the MODE button to advance to the Timer mode. The Timer icon illuminates.

Active icons in Timer mode:

- Delay icons – I/F/R/C. I=Instant, F=Fixed, R=Random and C=Custom
- Sensor: Mic (Microphone) / Acc (Accelerometer)
- Timer icon
- 1st Shot/Shots



## Timer Settings

In Timer mode, press the SET button to enter settings.

### Delay

Press the UP/DOWN button to choose between the Start Delay options.

If Custom "C" is selected, hold down the SET button to set the desired Delay time. Press MODE to exit.

### Par

Press the UP/DOWN buttons to set the Par time. Holding down the SET button deletes the Par.

### Auto Start (AUtSt)

Press the UP/DOWN button to select ON/OFF. When Auto Start is set to OFF, you will need to press the REV button at least once before you can start the timer again.

### Beep Type

Press the UP/DOWN button to select between Off (silent), Type 1 (low) and Type 2 (loud).

### **Sensitivity**

Press the UP/DOWN button to select the desired sensitivity level:

Min – least sensitive

Max – most sensitive

Airsoft – extreme sensitivity for Airsoft use

### **Filter**

Press the UP/DOWN button to choose between the filter values (0.02 sec to 0.12 sec).

### **Sensor**

Press the UP/DOWN button to select between Mic (Microphone) or Acc (Accelerometer).

### **Bluetooth (Send)**

Press the UP/DOWN button to turn Bluetooth ON or OFF. The Bluetooth icon is illuminated while the SHOTMAXX is searching for other devices.

The icon remains solid once connected.

Android/iOS/Other - set Bluetooth to ON.

Search for your SHOTMAXX timer (appears in your device list as SMXX-4300012, for example) and click "pair".

### **Timer Operation**

START – starts the countdown (I/F/R/C) to the activation beep.

REV – reviews the recorded shots (stops the timer from recording).

### **Attention!**

The timer will record up to a maximum time of 600 sec (10 min) and/or 100 shots in a string.

### **Stopwatch/Countdown Mode**

While in Stopwatch/Countdown mode, press the SET button to toggle between Stopwatch, 3 min countdown and 5 min countdown. Press START to activate.

### **Stopwatch**

Press the START button to start the stopwatch. Pressing START again while the stopwatch is running pauses or resumes the count.

Pressing the DOWN button while the stopwatch is running records the "split/lap" time.

When the stopwatch is paused, you can review these split times as you would review shots.

Hold the SET button to reset.

### **Countdown (3 or 5 minutes)**

Press the START button to start countdown. Pressing the START button again while the countdown is running will pause the countdown.

Press the DOWN button to reset countdown.

### **Display Backlight**

Press the LIGHT button to illuminate the display, which will remain illuminated for 4-5 seconds unless another button is pressed within this time frame in which case the backlight will stay on for another 4-5 seconds.

Note that the backlight is inactive in timer use. Pressing on the LIGHT button while the timer is in detection mode will stop the timer from recording further and display the last shot, shot number and split.

## **Double-Alpha Academy B.V.**

Elzenweg 33b

5144MB Waalwijk, Netherlands

Tel: +31 416 660 464

Fax: +31 416 392 040

Email: [daa@doublealpha.biz](mailto:daa@doublealpha.biz)

[www.doublealpha.biz](http://www.doublealpha.biz)

[www.shotmaxx.com](http://www.shotmaxx.com)

